



WRAP ENTIRE ASSEMBLY WITH INSULATION TAPE FOR LIGHT FREEZE PROTECTION. DO NOT BLOCK AIR VENT ON BACKFLOW PREVENTER,

AIR VENT OPENING ON TOP OF AVB MUST BE 12" HIGHER THAN ALL WATER OUTLETS.

WATER SPILLING FROM THE AIR VENT INDICATES THE NEED FOR REPAIR. (SOME MINOR SPILLAGE MAY OCCUR ON START UP AND IS NORMAL. MAYBE A TABLESPOON OR TWO.)

\*GALV. STEEL PIPE AND FITTINGS MAY BE USED IN SOME CLIMATES. CHECK IF APPROPRIATE LOCALLY. GALV. STEEL WILL REACT WITH THE BRASS B.P. IN MANY CLIMATES RESULTING IN PREMATURE FAILURE.

Use of this drawing is at your own risk. Drawing may not be appropriate for use in all situations or conditions. Check with local authorities for specific requirements of governing codes and ordinances. By use of this drawing you agree in full to the "Terms of Use" found at <http://www.jessstryker.com/legal.htm> as if they were repeated in full here.

**IrrigationTutorials.com**

*The web's mother lode of free irrigation information!*

**ATMOSPHERIC VACUUM BREAKER**

Not to Scale  
SAMPLE PLAN ONLY - NOT FOR CONSTRUCTION