

Use of this drawing is at your own risk. Drawing may not be appropriate for use in all situations or conditions. Check with local authorities for specific requirements of governing codes and ordinances. By use of this drawing you agree in full to the "Terms of Use" found at http://www.lrrigationTutorials.com as if they were repeated in full here.

IrrigationTutorials.com

The web's mother lode of free irrigation information

DRIP EMITTER SPACING

Scale: |" = 5' SAMPLE PLAN ONLY - NOT FOR CONSTRUCTION